

ORDERING AID

LOW VOLTAGE TYPE K-LINE DRAWOUT CRADLES

Order Entry Guide

Cat. # **C** - -

 
Cradle Assembly for Bkr. Types ①

- K-225 21
- K-600 & 800 22
- K-1600 23
- K-2000 24
- K-3000 25
- K-4000 26
- K-DON-600 & 800 32
- K-DON-1600 34

- # of Poles**
- 3 Pole 5
 - 2 Pole 6

- Options:**
- Standard (none) 10
 - ② Key Interlock Prov. 11
 - Door Interlock Prov. 13
 - ③ Mechanical Intlk. 16

Secondary Disconnect Assembly (8 points each)
 Location numbered right to left from rear view. (0=none)
 Based on Circuit Breaker Wiring Diagrams.
 (Leave blank if not known.)



- 4321
- 4320
- 4301
- 4300
- 4021
- 4020
- 4001
- 4000
- 0321
- 0320
- 0301
- 0300
- 0021
- 0020

Secondary Disconnect Contact Number:

- └─ #1 TO #8
- └─ #9 TO #16
- └─ #17 TO #24 ④
- └─ #25 TO #32 ⑤

Order entry examples

Example 1: K800 cradle, 3 pole, standard, for use with a manually operated circuit breaker. No wiring diagram used for the breaker.
 Correct cradle catalog number: C1225-10-0000

Example 2: K1600 cradle, 3 pole, provisions for Kirk Key interlock, for use with an electrically operated circuit breaker per wiring diagram 708601. used for the breaker.
 Correct cradle catalog number: C1235-11-0001

Example 3: K3000 cradle, 3 pole, standard, for use with an electrically operated circuit breaker with an unknown wiring diagram.
 Correct cradle catalog number: C1255-10-____
 Digits 7-10 are left blank if the correct numbers are not known.

NOTES:

- ① Also applies to breaker type "S" or "M" suffix.
- ② Provisions only for the interlock. Customer provides and mounts Kirk Key type "FX" lock per 146480-F, or "M2FX" per 147400-F.
- ③ Also requires (2) separate cables. p/n 708899- (contact Circuit Breaker Division for complete details before ordering).
- ④ If By-Pass switches between Secondary Disconnect # 17-18 & 21-22 are required, change catalog digit number from "3" to "5".
- ⑤ If By-Pass switches between Secondary Disconnect # 25-26 & 29-30 are required, change catalog digit number from "4" to "6".
- ⑥ For any catalog number not described above, contact the Circuit Breaker Division.
- ⑦ If trying to use previous cradle cat. number, contact CBD for assistance. (Must convert old S.D. 2 digit # into 4 digit # shown above.)

ABB Power Distribution, Inc.

Circuit Breaker Division

I-95 & Mechanicsville Hwy

Florence, SC 29501

Courtesy of store.ips.us

