



# Power Break® II Circuit Breaker Accessories

## Undervoltage Release

### Introduction

The Undervoltage Release (UVR) module, shown in Figure 1, can be installed in 800–2000 ampere frame Power Break® II circuit breakers. This module trips the circuit breaker when the input control voltage drops to 35–60% of its rated value and prevents an open breaker from closing until the input control voltage is greater than 80% of the rated value.

In addition to providing a trip signal to the breaker, the UVR accessory module can be set up to interact with other Power Break II accessories. DIP switches on the rear of the breaker Trip Unit can configure the UVR accessory to activate a Bell Alarm–Alarm Only accessory or a Bell Alarm with Lockout accessory when a UVR trip occurs. The Accessory Configuration section below describes how this can be done.

The catalog numbers for the UVR for various voltage applications are listed in Table 1.

Catalog Number	Voltage Rating <sup>①</sup>	Peak Inrush Current, A <sup>②</sup>	Nominal RMS Current, mA
SPUV024DC	24 Vdc	15	140
SPUV048DC	48 Vdc	7.5	70
SPUV125DC	125 Vdc	3	30
SPUV250DC	250 Vdc	1.5	15
SPUV024AC	24 Vac	15	370
SPUV048AC	48 Vac	7.5	210
SPUV120AC	120 Vac	3	80
SPUV208AC	208 Vac	1.9	60
SPUV240AC	240 Vac	1.5	45

① 24–240 Vac devices are rated for 50/60 Hz.

② Peak inrush current is present for 2–6 ms after activation. This number is provided so that fuses and supplies can be chosen appropriately.

Table 1. Catalog numbers and voltages for the Undervoltage Release.

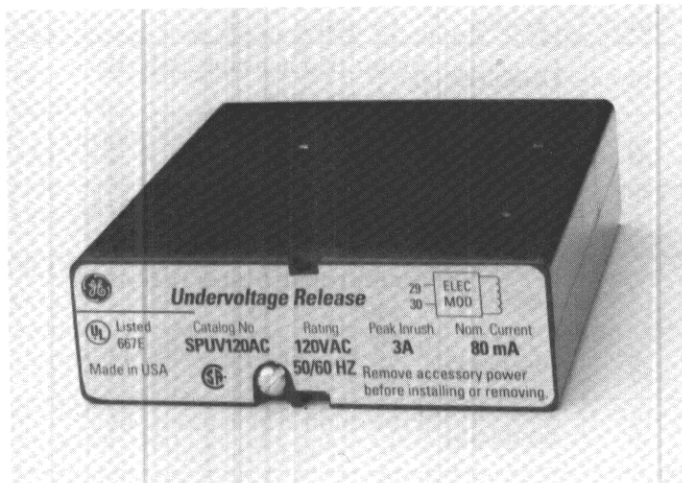


Figure 1. Undervoltage Release.

### Operation

Apply control voltage to terminals 29 and 30 of the terminal strip on the right side of the breaker. When the applied control voltage is above 80% of the UVR's rated value, the breaker can be closed. When the voltage drops to 35–60% of the rated value, the UVR will trip the breaker.

### Installation [store.ips.us](http://store.ips.us)

**WARNING:** Before installing any accessories, turn the breaker off, disconnect it from all voltage sources, and discharge the charging springs.

**AVERTISSEMENT:** Avant d'installer toute accessoire, mettre le disjoncteur en position OFF, le déconnecter de toute tension d'alimentation, et décharger les ressorts d'armement.

The Undervoltage Release is installed in the accessory compartment through the front of the circuit breaker in the position shown in Figure 2.

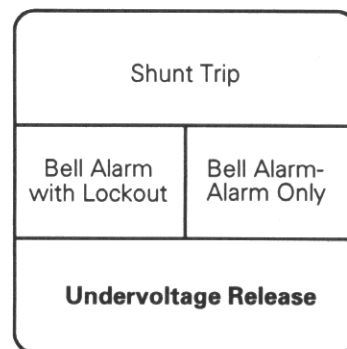


Figure 2. Accessory compartment on front of circuit breaker, with Undervoltage Release slot indicated.

Use the following procedure to install the UVR module into the UVR slot in the accessory compartment of the circuit breaker:

1. Open the hinged door over the accessory compartment and Trip Unit.
2. To remove an existing accessory module, loosen the accessory locking screw and pull the module out with the Rating Plug Removal Tool (catalog number TRTOOL).
3. Insert the UVR module into the proper slot, as illustrated in Figure 3. The UVR module is keyed for the correct slot in the accessory compartment. If the module cannot be fully seated in the compartment, check that the compartment position is correct.

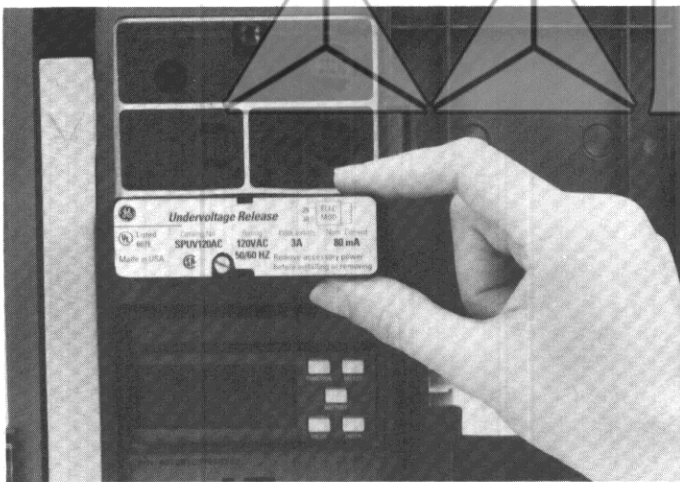


Figure 3. Inserting the Undervoltage Release into the accessory compartment.

4. Tighten the locking screw on the front of the accessory until it is snug (torque of 9 in-lb.)

**CAUTION:** Overtightening the locking screw may damage or distort the case of the accessory.

**ATTENTION:** Le serrage excessif de la vis de verrouillage peut déformer le boîtier d'accessoire.

5. To reconfigure the UVR accessory to activate installed Bell Alarm–Alarm Only or Bell Alarm with Lockout accessories when a UVR trip occurs, follow the procedure described in the Accessory Configuration section. Otherwise, continue with this procedure.
6. Connect the control wiring for the UVR to terminals 29 and 30 at the terminal block on the right side of the breaker.
7. Test the UVR to ensure proper operation, according to the procedures below.
8. Reconnect power to the circuit breaker and any other accessories.
9. Close and lock or seal the door over the accessory compartment and Trip Unit to prevent unauthorized changes to Trip Unit settings and to keep contaminants out of empty accessory slots.

## Accessory Configuration

This section only applies if Bell Alarm–Alarm Only or Bell Alarm with Lockout accessories are installed in the breaker.

The UVR accessory can be configured to activate the Bell Alarm–Alarm Only or Bell Alarm with Lockout accessories if a UVR trip occurs. The configuration can be changed by removing the Trip Unit from the breaker, setting the DIP switches on the rear of the Trip Unit, and reinstalling the Trip Unit. Figure 4 illustrates the Trip Unit read DIP switches and their functions. Table 2 lists the switch functions and the factory settings for each.

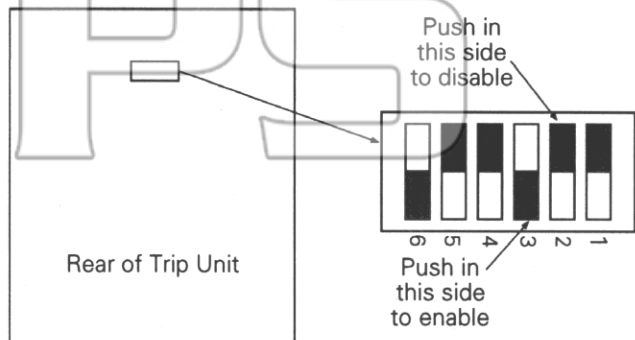


Figure 4. Accessory switch on rear of Trip Unit, showing factory settings (solid part indicates that switch is pushed in on that side).

Switch	Factory Setting	Function
1	Disabled	Shunt trip activates Bell Alarm–Alarm Only
2	Disabled	UVR trip activates Bell Alarm–Alarm Only
3	Enabled	Protection trip activates Bell Alarm–Alarm Only
4	Disabled	Shunt trip activates Bell Alarm with Lockout
5	Disabled	UVR trip activates Bell Alarm with Lockout
6	Enabled	Protection trip activates Bell Alarm with Lockout

Table 2. Accessory switch settings, including factory defaults.

## Description of Switch Settings

Following are descriptions of the effects of each accessory switch when it is *enabled*:

1. When a Shunt Trip accessory causes the breaker to trip, the contacts of the Bell Alarm–Alarm Only also change state. (The factory switch setting is *disabled*.)
2. When an Undervoltage Release accessory causes the breaker to trip, the contacts of the Bell Alarm–Alarm Only also change state. (The factory switch setting is *disabled*.)
3. When a protection trip (long-time, short-time, instantaneous, ground-fault, or protective-relay) occurs, the contacts of the Bell Alarm–Alarm Only also change state. (The factory switch setting is *enabled*.)
4. When a Shunt Trip accessory causes the breaker to trip, the contacts of the Bell Alarm with Lockout also change state. (The factory switch setting is *disabled*.)
5. When an Undervoltage Release accessory causes the breaker to trip, the contacts of the Bell Alarm with Lockout also change state. (The factory switch setting is *disabled*.)
6. When a protection trip (long-time, short-time, instantaneous, ground-fault, or protective-relay) occurs, the contacts of the Bell Alarm with Lockout also change state. (The factory switch setting is *enabled*.)
7. Pull the Trip Unit locking lever to the right. While holding the lever, carefully align the connector on the rear of the Trip Unit with the connector in the breaker. Press down on the Trip Unit, while holding it near the battery cover. When the Trip Unit is fully seated, slide the locking lever back to the left.
8. Reinstall the breaker top cover and tighten the four #10-32 screws to 32 in-lbs.
9. Replace the trim plate and tighten the four #8-32 screws to 20 in-lbs.
10. Verify that the switch settings are correct by inducing breaker trips from the UVR and Shunt Trip (if present) and checking the responses of the Bell Alarm–Alarm Only and Bell Alarm with Lockout accessories.

## Test Procedure

Use the following procedure to test the UVR for proper operation.

1. Open the breaker.
2. Turn off the power to the UVR.
3. Try to manually close the breaker; the breaker should not close.
4. Apply at least 80% of the rated voltage specified on the UVR name plate to the UVR control inputs.
5. Try to close the breaker; it should close as normal.
6. Check that the Trip Unit display is active (powered).
7. With the breaker closed, reduce the UVR control voltage to 35–60% of the rated voltage; the breaker should trip within 0.5 second.
8. If a Bell Alarm–Alarm Only or Bell Alarm with Lockout is present, ensure that they activate (or do not activate) as was selected by the Trip Unit DIP switches.

## Procedure for Changing Switch Settings

Change the accessory switch settings with the following procedure:

**WARNING:** Before beginning this procedure, turn the breaker off, disconnect it from all voltage sources, and discharge the closing springs.


**AVERTISSEMENT:** Avant de commencer cette procédure, mettre le disjoncteur en position OFF, le déconnecter de toute tension d'alimentation, et désarmer les ressorts de fermeture.

1. Loosen the four #8-32 screws on the breaker trim-plate assembly and remove the trim plate.
2. Loosen the four #10-32 screws at the corner of the breaker cover. Remove the cover from the breaker face.
3. Pull the Trip Unit locking lever to the right, then hold the Trip Unit near the battery cover and lift it straight out of the breaker.
4. Refer to Figure 4 and Table 2 to determine the switches to be changed.
5. Push in the appropriate "Enable" or "Disable" side of the switch.
6. Confirm all switch settings before reinstalling the Trip Unit in the breaker.

## Trouble-Shooting

The following guide is provided for trouble-shooting and isolating common problems. It does not cover every possible situation. Contact the ED&C Customer Support Center at 800-843-3742 if any problem is not resolved by these procedures.

Symptom	Possible Cause	Corrective Action
1. The UVR module will not insert completely in the breaker.	The module is inserted incorrectly.	Ensure that the module is inserted in the correct slot, as in Figure 2, and that the label is upright. Ensure that the module is completely seated and that the screw is tightened.
2. The breaker closes when the UVR is de-energized.	The UVR lockout plunger is not engaged.	Remove the UVR module. Check that the lockout plunger protrudes approximately 1/4 inch out of the module; if it does not, replace the UVR. If the plunger length is correct, reinsert the UVR, ensuring good alignment of the module to the pocket. Ensure that it is completely seated, flush with the top of the pocket, then tighten the screw to 9 in-lb. Check that the control power to the UVR is off.
3. The breaker will not close when the UVR is energized.	The UVR is actually energized. The UVR solenoid is not energized.	Check that UVR control power is applied at greater than 80% of the UVR rated voltage. Check that the module is completely inserted; reinsert if necessary. Note that an otherwise unpowered Trip Unit would be powered up by an energized UVR accessory.
4. The breaker does not trip when UVR control power is removed.	The breaker is not closed. UVR control power is actually still applied.  The UVR trip connection is poor.	Verify that the breaker is closed. Check that the UVR control power has been removed or that its voltage is less than 35% of the rated value. Check that the UVR module is completely inserted. Check that the Trip Unit is seated correctly. If the Trip Unit was removed to set the switches, check that it has been correctly installed; remove and reinstall, if necessary.
5. The Bell Alarm-Alarm Only or Bell Alarm with Lockout does not trip correctly (trips when it shouldn't or doesn't trip when it should).	The Bell Alarm-Alarm Only or Bell Alarm with Lockout configuration switches on the back of the Trip Unit are not properly set.  The Bell Alarm-Alarm Only or Bell Alarm with Lockout accessory is improperly installed.	Follow the procedure to remove the Trip Unit and set the switches. Check that the switches have been set correctly. See the Trouble-Shooting Guide for the Bell Alarm with Lockout in GEH-6278 or the Bell Alarm-Alarm Only in GEH-6275.

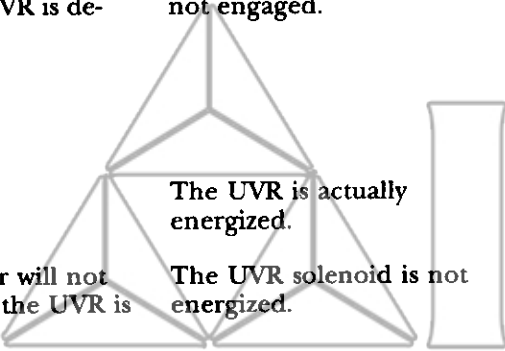

store.ips.us

These instructions do not cover all details or variations in equipment nor do they provide for every possible contingency that may be met in connection with installation, operation, or maintenance. Should further information be desired or should particular problems arise that are not covered sufficiently for the purchaser's purposes, the matter should be referred to the GE Company.



**GE Electrical Distribution & Control**

General Electric Company  
41 Woodford Ave., Plainville, CT 06062

GEH-6285A 1095

© 1995 General Electric Company

Courtesy of store.ips.us